











## M200 SPARE PARTS LIST















No.	Code No.	Picture	Description
1	M200-01		Engine
2	M200-02		Lower Plate
3	M200-03		Frame
4	M200-04		Handle Bar
5	M200-05		Main Stand
6	M200-06		Single Stand
7	M200-07		Engine Hanger
8	M200-08		Panel Bracket
9	M200-09		

10	M200-10		
11	M200-11		ECU Bracket
12	M200-12		Lock-plate
13	M200-13		Rear fender bracket
14	M200-14		Front top cover
15	M200-15		Front mud plate
16	M200-16		Front cover
17	M200-17		
18	M200-18		Front Tools box
19	M200-19		The front left cover
20	M200-20		Right front cover
21	M200-21		Front Left Shield

22	M200-22		Front Right Shield
23	M200-23		Left decoration plate
24	M200-24		Right decoration plate
25	M200-25		
26	M200-26		
27	M200-27		Rear center cover
28	M200-28		
29	M200-29		
30	M200-30		Front handle cover
31	M200-31		Rear handle cover
32	M200-32		
33	M200-33		Rar Parts of Front Fender

34	M200-34		Luggage box
35	M200-35		
36	M200-36		
37	M200-37		
38	M200-38		Front and bottom fenders
39	M200-39		L. board
40	M200-40		R. board
41	M200-41		Footplate
42	M200-42		Battery box cover
43	M200-43		Sediment plate
44	M200-44		Seat cushion dash
45	M200-45		Left side cover

46	M200-46		Right side cover
47	M200-47		Tank bottom plate
48	M200-48		Rear Wheel Fender
49	M200-49		Tool Box
50	M200-50		
51	M200-51		
52	M200-52		VIN cover
53	M200-53		
54	M200-54		Rear Fender
55	M200-55		
56	M200-56		Rear Lighting Cover
57	M200-57		Cover side cover

58	M200-58		Helmet hook
59	M200-59		
60	M200-60		Rear left turn signal bracket
61	M200-61		Rear Right turn signal bracket
62	M200-62		Rear L/R. turn light rubber
63	M200-63		
64	M200-64		Front Headlight Assy
65	M200-65		Tailight
66	M200-66		Rear L/R. turn light
67	M200-67		Rear plate lamp assembly
68	M200-68		Rear Reflector
69	M200-69		



70	M200-70		
71	M200-71		Fuel Tank
72	M200-72		Tank cap
73	M200-73		Front Wheel
74	M200-74		Rear Wheel
75	M200-75		Front Tire 80/90-14
76	M200-76		Rear Tire 100/80-14
77	M200-77		Inflating Valve
78	M200-78		Right switch assembly
79	M200-79		Left switch assembly
80	M200-80		
81	M200-81		

82	M200-82		Front Disc Brake Assy
83	M200-83		Front Brake Disc
84	M200-84		Inner hexagon bolt
85	M200-85		
86	M200-86		F.L/R.Shock Absorber
87	M200-87		Rear Shock Absorber
88	M200-88		
89	M200-89		
90	M200-90		Set Lock
91	M200-91		Main cable
92	M200-92		
93	M200-93		Speedometer



94	M200-94		Brake cable
95	M200-95		Throttle cable
96	M200-96		Seat lock cable
97	M200-97		Horn
98	M200-98		Rectifier
99	M200-99		Relay
100	M200-100		Flasher
101	M200-101		Throttle body Assy
102	M200-102		ECU
103	M200-103		Ignition Coil
104	M200-104		Temperature sensor
105	M200-105		Oxygen sensor

106	M200-106		Oil pump relay
107	M200-107		Oil pump
108	M200-108		
109	M200-109		
110	M200-110		
111	M200-111		Muffler Ass
112	M200-112		Washer, Exhaust Outlet
113	M200-113		Triangle connecting plate assembly
114	M200-114		L.&R. Pedals
115	M200-115		Rear Carrier
116	M200-116		Air Filter
117	M200-117		Seat

118	M200-118		Single Stand Spring
119	M200-119		Main Stand Spring
120	M200-120		
121	M200-121		
122	M200-122		Expansion screws
123	M200-123		
124	M200-124		
125	M200-125		
126	M200-126		
127	M200-127		Left/Right Grip
128	M200-128		
129	M200-129		

130	M200-130		
131	M200-131		
132	M200-132		
133	M200-133		
134	M200-134		
135	M200-135		
136	M200-136		
137	M200-137		
138	M200-138		Steering Bowl
139	M200-139		Rear Mirror
140	M200-140		Battery
141	M200-141		Tools

142	M200-142		USB
-----	----------	---	-----





















